

alcatel

PIXI⁴

7" 3G ANDROID

QUICK START GUIDE

Front
camera



Power key

Volume
up/down

9003X

9003A


CJB1F10ALAAA

1




- Fully charge your device for the first time using.

2

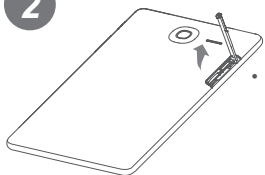

- Open the cover.

3

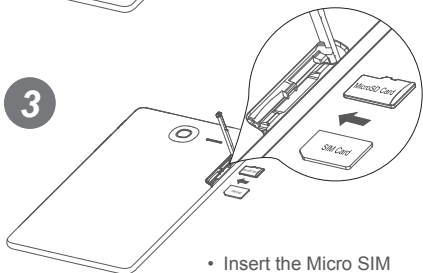

- Insert the Micro SIM card and MicroSD card, then close the cover.